

Vanguard VM-2500

IMPLEMENT Type Configuration

Monitor Setup Codes Common Planter Harness

Use the following codes when programming your “*Precision Information Center*” for a planter. Call us for a copy of the harness layout and ask for the specific drawing number.

IMPLEMENT Type	Planter Type	Planter Drawing
1	4 Row	46682-5000
2	KINZE 3 Front Row / 4 Rear Row	46682-5037
3	4 Front Row / 3 Rear Row	46682-5009
4	4 Front Row / 3 Rear Row Skip	46682-5055
5	4 Front Row / 5 Rear Row	46682-5010
6	6 Row	46682-5001
7	KINZE 5 Front Row / 6 Rear Row	46682-5038
8	6 Front Row / 3 Rear Row	46682-5011
9	6 Front Row / 5 Rear Row	46682-5012
10	6 Front Row / 5 Rear Row Skip	46682-5056
11	6 Front Row / 7 Rear Row	46682-5013
12	8 row	46682-5002
13	KINZE 7 Front Row / 8 Rear Row	46682-5039
14	8 Front Row / 5 Rear Row	46682-5014
15	8 Front Row / 7 Rear Row	46682-5015
16	10 Row	46682-5003
17	12 Row	46682-5004
18	KINZE 11 Front Row / 12 Rear Row	46682-5040
19	12 Front Row / 9 Rear Row	46682-5016
20	12 Front Row / 11 Rear Row	46682-5017
21	Great Plains 12 Front Row / 11 Rear Row	46682-5043
22	16 Row	46682-5041
23	KINZE 15 Front Row / 16 Rear Row	46682-5042
24	KINZE 16 Front Row / 16 Rear Row	46682-5044
25	24 Row	46682-5006
26	32 Row	46682-5007

IMPliment Type	Planter Type	Drawing
27	36 Row	46682-5008
28	Black Machine 8/9 Row Straight	46682-5018
29	Black Machine 8/9 Row Folded	46682-5019
30	Black Machine 8/11 Row Straight	46682-5020
31	Black Machine 8/11 Row Folded	46682-5021
32	Black Machine 12/13 Row Straight	46682-5022
33	Black Machine 12/13 Row Folded	46682-5023
34	Black Machine 16/17 Row Straight	46682-5024
35	Black Machine 16/17 Row Folded	46682-5025
36	18 Row Central Fill	46682-5026
37	6 Row Central Fill w/ 7 Row Splitter	46682-5027
38	6 Row Central Fill	46682-5028
39	24 Row Central Fill	46682-5029
40	8 Row Central Fill w/ 7 Row Splitter	46682-5030
41	8 Row Central Fill w/ 9 Row Splitter	46682-5031
42	8 Row Central Fill	46682-5032
43	16/31 Row Wide (16)	46682-5033
44	16/31 Row Narrow (31)	46682-5034
45	8/15 Row Wide (8)	46682-5035
46	8/15 Row Narrow (15)	46682-5036
47	2 Sensor Drill Harness	46682-5052
48	3 Row Box Drill	46682-5053
49	4 Sensor Drill Harness	46682-5054
50	UHR Houck 2750-700H	46682-5057
51	UHR JD 2750-700	46682-5058
52	5 Sensor Drill	46682-5059
53	6 Sensor Drill	46682-5060
54	UHR 3 Section Drill	46682-5061
55	UHR Houck 2750-700H-4	46682-5062
56	UHR 2 Section 4 per drill	46682-5063
57	10 Sensor Drill	46682-5064
58	UHR 10 Sensor	46682-5065
59	12 Sensor Drill	46682-5066
60	UHR 12 Sensor 3 section and A. S.	46682-5067
61	16 Sensor Drill	46682-5068
62	16 Sensor Drill	46682-5069
63	23 Row Rear Fold	46682-5070